

© Copyright SDS Imports 11/17

---

# LH12

## “Lynx”



# Semi Auto Shotgun Manual

SDS Imports LLC  
PO Box 9144 Knoxville, TN 37940  
865 604-6894  
[www.sdsimports.com](http://www.sdsimports.com)  
[info@sdsimports.com](mailto:info@sdsimports.com)

---

# LH12

## SEMI AUTO SHOTGUN

### WARNING AND INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS

#### GENERAL INFORMATION:

Weight (average) = 9.5 LBS.  
Overall Length - 43"

FOR YOUR SAFETY AND THE SAFETY OF OTHERS, this owner's manual contains important warnings and safety procedures which must be understood BEFORE using this shotgun. Read the entire manual and if you do not understand any part it or the operation of your shotgun, stop and seek professional firearms instructions. You can get a copy of this manual from SDS Imports LLC. on request.

Record the serial number of your firearm # \_\_\_\_\_

Make a copy of this page and your proof of purchase/sales record for safekeeping in a secure safe or fireproof container. Such proof is necessary if the shotgun is stolen or for warranty repair. Before handling any shotgun, make sure you know the safety procedures and most importantly, keep the shotgun pointed in a safe direction at all times.

#### **WARNING**

**\*\*YOU RISK INJURY OR DEATH BY HANDLING THIS SHOTGUN\*\***

Before handling this shotgun, read, understand and follow the instructions in this manual. Always keep this manual with the shotgun. If you lend, give or sell this shotgun, be sure the manual goes with it. If there is anything you do not understand, seek advice from someone qualified in safe handling of shotguns.

#### **WARNING**

\*This shotgun should always be transported unloaded.\*

## **TYPE OF AMMUNITION TO BE USED**

It is suggested that high quality commercially manufactured ammunition be used in this shotgun. Some factory ammunition works better than others and you should stick with the brand you find works well in your shotgun. Avoid military surplus or hot loaded ammo. The use of reloaded, high pressure or hand loaded ammunition will void the warranty.

## **NOTICE**

SHOTGUNS ARE CLASSIFIED AS DANGEROUS WEAPONS and are sold by SDS Imports LLC with the specific understanding that we are not responsible in any manner what-so-ever for their safe handling or resale under local laws and regulations.

SDS Imports LLC shall not be responsible in any manner whatsoever for malfunctioning of the shotgun, for physical injury or for property damage resulting in whole or in part from (1) intentional or negligent discharge, (2) improper or careless handling, (3) unauthorized modifications and/or alteration to the internal/safety mechanisms, (4) defective, improper, high pressure, hand-loaded, or reloaded ammunition, (5) corrosion and/or lack of proper maintenance (6) neglect, or (7) other influences beyond our direct and immediate control. This limitation applies regardless of whether liability is asserted on the basis of contract, negligence or strict liability (including any failure to warn). Under no circumstance shall SDS Imports LLC be liable for incidental or consequential damages, such as loss of use of property, commercial loss and loss of earnings or profits.

## **SAFETY PROCEDURES**

- 1.** We recommend that you get competent firearm instruction in safe handling before using this shotgun. Please ask your dealer. All guns are extremely dangerous if carelessly handled or used. Remember that the shotgun user is the primary "safety" and to depend on any mechanical devices is to be only half safe.
- 2.** This shotgun will fire if a cartridge is in the chamber and the trigger is pulled and the safety is disengaged and the bolt is in the battery position.
- 3.** **DO NOT LOAD THIS SHOTGUN UNTIL YOU UNDERSTAND HOW THIS SHOTGUN OPERATES.** KEEP this shotgun unloaded at all times except when ready to fire and you are sure of your target.
- 4.** **ALWAYS** carry this shotgun in a case or original box unloaded.
- 5.** **NEVER** point this shotgun at anything that is not your intended target even if this shotgun is unloaded. When loading, cleaning, unloading or handling,

always be sure the muzzle is pointed in a safe direction and always keep your finger off the trigger.

6. NEVER assume any gun is unloaded. Before handling, check to make sure the chamber is empty. See unloading Instructions and then unload any ammunition. Make sure you know that this or any shotgun is fully unloaded before displaying or handling it. When handling any shotgun, keep your fingers away from the trigger at all times until you intend to fire.
7. **WARNING:** The actual shotgun does not contain any lead; however, it does fire ammunition containing lead or lead compounds known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who discharge a shotgun, stand near someone who discharges a shotgun or cleans shotguns are hereby warned of the dangers presented by lead and lead compounds and should take protective health measures. Avoid exposure to lead while handling and wash your hands after contact. Proper air ventilation is absolutely necessary when shooting indoors.

### **AMMUNITION WARNING**

Old, Hot-loaded and/or re-loaded ammunition may be dangerous. Because of the poor or nonexistent quality control standards among some companies or people who make reloaded ammunition and the dangers of overloads and under loads (squib loads) which may occur, we recommend that only good quality new factory ammunition be fired in our shotguns. [If you prepare your own hand loads, do NOT exceed recommended pressures in line with those generated by standard factory loads as manufactured by Remington, Winchester, Federal, PMC or other reputable companies.] Old ammunition may not fire with sufficient force to expel the projectile from the barrel.

### **READING THESE SAFETY RULES WILL SAVE YOUR LIFE OR THE LIFE OF SOMEONE ELSE**

Get instructions from a competent firearms instructor before using this or any shotgun. Learn from a professional how to handle, load, unload, operate, fire and care for your gun.

NEVER PLAY with your shotgun. It is not a toy and can be a very dangerous weapon that can cause serious personal injury or death.

Always keep the gun pointed in a safe direction. Treat every gun as if it is loaded...all the time. NEVER point any shotgun (loaded or unloaded) at any person or anything you do not intend to shoot. Always keep your gun unloaded until ready to use and make sure that it is unloaded before cleaning.

Keep your finger OFF the trigger until you are actually aiming at the target and ready to shoot. Learn to rest your finger outside of the trigger guard.

Never rely on a gun's "safety" to protect you from unsafe gun handling. A safety is only a mechanical device, not a substitute for common sense and gun safety procedures.

Never leave a gun unattended or where it could fall and fire.

Store guns and ammunition separately **beyond the reach of children.**

**READING THESE SAFETY RULES WILL SAVE YOUR LIFE  
OR THE LIFE OF SOMEONE ELSE**

Make sure that they are properly secured so untrained individuals and children will be denied access to your guns and ammo.

Test your gun's operation and safeties only at a shooting range while the shotgun is pointed in a safe direction.

Know your target and what is beyond. Ask yourself what your bullet will hit if it misses the target or passes through the intended target. Remember, a fired projectile can travel over 1.5 miles (including a ricochet) and is capable of going through walls.

Guns and alcohol or drugs do not mix. Don't take any alcoholic beverages and/ or drugs before or during shooting activities.

Never pull a gun toward you by the muzzle. Don't climb a tree, cross a ditch or fence with a loaded gun.

Always empty guns before entering a house, car, truck, boat, RV, camp or any building.

When receiving a gun, always open the bolt and check to make sure the chamber is unloaded.

NEVER accept anyone's word that a gun is "unloaded" or "empty". You should immediately open the action and check to make sure it is unloaded.

Be careful with ALL ammunition. Even "blank" cartridges are deadly at close range due to the muzzle blast. Make sure your ammunition is in new and in good clean condition. Do NOT oil or grease ammo as this may damage the cartridge primer. Do NOT tamper with or alter the standard factory ammunition.

Keep shotguns unloaded when not actually in use. Load the gun only when on the range preparing to fire and unload it before leaving the range.

Never put your hand over the muzzle of a gun.

ALWAYS WEAR protective shooting glasses and hearing protection when using firearms.

Spectators should be at least 10 feet behind and away from the shooter while the shooter is loading, shooting and unloading. Spectators should wear

protection for hearing and sight loss and they should avoid distracting those shooting their shotguns.

Never drop your gun. If you do drop it, unload it and check it for proper function before using it again.

Do NOT alter or modify your gun. Don't try to change your gun's trigger pull, because it may affect sear engagement and thereby cause accidental firing.

Do NOT remove any internal safety or safety device on the shotgun. Safety mechanisms are designed to protect you from injury or death.

Do maintain and keep your gun clean. Keep in a dry place away from other metals and water. If your gun shows sign of corrosion or improper operation, have it serviced by a competent gunsmith.

Keep the muzzle pointed in a safe direction when loading and unloading your gun. Never point the muzzle at anyone.

Never shoot at hard flat surfaces or water....bullets ricochet.

If a gun fails to fire when the trigger is pulled, keep it pointed down range at the target for 60 seconds. Sometimes slow primer ignition will cause a "hang fire" and the cartridge will go off after a short pause. If it still fails to fire, keep the muzzle pointed in safe direction and avoid exposure to the breech, as you attempt to unload your shotgun.

Never let water, snow, mud or other material enter the barrel. Always be sure the barrel is free of any obstruction.

Since many ammunition identifications sound similar, be sure that you use only the correct ammunition for your gun. Do NOT use the wrong size or wrong strength ammunition in your shotgun.

Repeated and prolonged exposure to gunfire may cause toxic levels of lead in your body. High levels of lead in the blood may result cancer, impotency, birth defects and other serious physical injury. When shooting indoors, make sure there is proper fresh air ventilation.

Teach children: 1. NOT to touch guns, bullets, cartridges, shells, flares or any explosive device and 2. If they discovery such a dangerous item or weapon, they must immediately report its location to their parents, school teacher and police.

Remember a shotgun has the capability of taking your life or the life of someone else. Be careful with your shotgun -- an accident is almost always the result of not following basic safety rules.

HOME SAFETY IS PROBABLY YOUR BIGGEST CONCERN. We suggest a gun lock such as Master Gun Locks. They work on most shotguns and are available in gun shops and sporting goods departments. For more information write: Master Gun Locks; Master Lock Company, P.O. Box 10367, Milwaukee.

WI 53210. You have invested this much in your new shotgun, now invest a little more in your family's safety.

**USED SHOTGUNS** - If you got your LH12 shotgun as a used gun, **BEFORE USING IT** you should unload it and check all its functions to be sure it works correctly. Shotguns are sometimes altered to work incorrectly, or parts may be removed, lost or replaced with incorrect parts. First, unload it and check it yourself and then take it to a good gunsmith who knows LH12 shotguns, and have him examine it.

**WRITE US** concerning any items or circumstances which you don't understand and which might relate to your safety and the operation of your shotgun.

### **WARNING**

**BEFORE LOADING** or firing a shotgun, examine the bore and the firing chamber to be certain they are clean and free of any obstruction. Even a heavy coat of oil, grease, snow or water may result in damage to the shotgun and injury to the shooter and/or persons near the shotgun. A misfire or unusual sound upon firing is a signal to cease firing and to examine the chamber and bore. If there is any obstruction, clear the obstruction and clean the bore and chamber before firing.

### **FIRING WARNING**

When shooting, full eye and ear protection is mandatory at all times. Shooters and spectators must wear shooting glasses and sound suppressor to prevent eye injury and hearing loss. Vision loss and hearing impairment can occur with only one moment of non-protection.

### **WARNING**

Any bore obstruction, even if it is only partly blocked, may cause the gun to destroy itself if it is fired, or may cause damage to the gun such as a bulged barrel. To avoid injury or death to the shooter or bystanders, check the barrel before shooting or if a shot does not sound normal.

### **WARNING**

Always keep the muzzle pointed in a safe direction! Never attempt to load or unload any shotgun inside a vehicle, building or other confined space (except a properly constructed shooting range). Enclosed areas frequently offer no completely safe direction in which to point the shotgun. If an accidental discharge occurs, there is great risk of injury or property damage. Before loading, always clean all, grease and oil from the bore and chamber, and check to be certain that no obstruction is in the barrel. Any foreign matter in the barrel could result in a bulged or burst barrel or other damage to the shotgun and could cause serious injury to the shooter or to others.

## **W A R N I N G**

If there is any reason to suspect that a bullet or projectile is obstructing the barrel, immediately unload the shotgun (See Unloading Instructions) and check the chamber and the bore. A bullet may be lodged some distance down the barrel where it cannot easily be seen. Check the bore by using a cleaning rod to pass through the barrel. If a blockage is in the bore, **DO NOT ATTEMPT TO SHOOT IT OUT WITH ANOTHER CARTRIDGE, OR BLOW IT OUT WITH A BLANK CARTRIDGE OR A CARTRIDGE FROM WHICH THE BULLET HAS BEEN REMOVED.** SUCH TECHNIQUE(S) CAN GENERATE EXCESSIVE PRESSURE, DAMAGE THE SHOTGUN AND CAUSE SERIOUS PERSONAL INJURY. If the blockage can be removed with a cleaning rod, clean any unburned powder grains from the bore, chambers & mechanism before resuming shooting. If the blockage cannot be dislodged by tapping it with a cleaning rod, take the shotgun to a gunsmith.

### **WARNING (Mechanical Malfunctions)**

STOP SHOOTING IMMEDIATELY AND UNLOAD YOUR SHOTGUN if your shotgun develops: a mechanical malfunction; binding or stoppage; spitting powder/gas; a cartridge primer is punctured; a cartridge case is bulged or ruptured; or the sound on firing does not sound quite right. Do NOT try one more shot but unload your shotgun and take it and the ammunition to a qualified gunsmith or send it back to SDS Imports LLC for examination. Do not assume that the shotgun is empty merely because you checked the chamber. You must also check the bore for any fired shot or wad jammed inside the barrel.

### **External Control Parts:**

**Trigger Block Safety:** Located on receiver above trigger, lever style. When moved to the full up position blocks trigger movement. When in the lower position trigger is fully exposed and free to move and the shotgun will fire if trigger is pulled!! Do not disengage safety unless you are ready to fire the shotgun. (Safety Engaged - Trigger Covered and Blocked and is blocked from full travel; Safety Disengaged - Trigger is fully exposed and the trigger has full travel...MAKE SURE YOU UNDERSTAND HOW THE SAFETY WORKS BEFORE YOU LOAD OR USE THE SHOTGUN)

**Trigger:** Located in the trigger guard with safety disengaged and trigger pulled to the rear the shotgun will discharge.

**Bolt Cocking Handle:** Located on right hand side of the shotgun protrudes from bolt carrier used for pulling bolt rearward.

**Magazine Release Lever:** Used for insertion or removal of the magazine. To insert the magazine engage the front lug of the magazine with the magazine lug located in the front of the magazine well. With the lugs engaged you should be able to swing the magazine up into the locked position. To remove the

magazine push the magazine release lever forward and swing the magazine down while pushing the magazine release lever.

**Dust Cover Release Latch:** Located in back of receiver above stock. If the detent is depressed and the latch is depressed, the upper receiver dust cover can be removed for disassembly. See disassembly section of manual.

**Dust Cover Release Latch Detent:** Located on upper receiver release latch. Round button that must first be depressed before latch is depressed.

**Bolt Catch:** Located by trigger guard. To use the Bolt Catch move the safety to the off position and pull the bolt to the rear and then push the Bolt Catch up so that it engages the bolt and holds it in the rear position. Now release the bolt and it should be held in place by the Bolt Catch. To load a gun using the Bolt Catch simply lock the bolt back as directed above, insert magazine as directed above. Then pull the bolt handle to the rear and release and the bolt handle and the bolt will strip a round from the magazine. Immediately move the trigger block safety to the safe position after a round has been stripped from the magazine.

**Gas regulator:** Located on the front of the gas tube. The gas regulator has four positions. The four dots on the front relate from smallest to largest, smallest dot is no gas/closed, next dot is for 30% of the gas, the following dot is 60% and the largest dot is for full gas transfer. The dot should line up with the detent and the regulator should begin from the completely screwed in position and then backed out to the correct position.

## INFORMATION FIGURES

### Direction for Assembly

The LH12 comes fully assembled. All you will need to do is remove the wrapping, clean the protective oil from the gun and insert the magazine.

:

### To load your Shotgun

1. Make sure the shotgun is pointed in a safe direction at all times, the safety is engaged, and never allow fingers or objects to contact trigger.
2. Do not load shotgun until you are ready to fire.
3. Remove magazine if it is not already removed
4. Do not disengage the safety.
5. Make sure the ammunition that you are using is the correct size and gauge. The receiver is marked with the gauge/chamber size or caliber, shotgun barrels marked 3" will also use 2 3/4" or 3" shot shells.

6. Visually inspect the chamber for obstructions by moving the bolt back and looking into the chamber. The chamber should be free of oil or grease or obstructions... The chamber is the rear portion of the barrel where the cartridge slides into from the pressure applied by the bolt.
7. After determining there are no obstructions in the chamber release the bolt and move the safety up or in the safe position, so that it blocks the movement of the trigger.



8. Insert five or less cartridges into the magazine.



**\*\*WARNING\*\***

Never insert the magazine into the receiver until you are ready to fire the shotgun...

9. Retract the bolt and, using the bolt hold open, lock it in the open position. You may now insert the magazine as described in the previous section.



## To Fire Your Shotgun

### **\*\*WARNINGS\*\***

- Do not disengage the safety until the shotgun is pointed in a safe direction and you are ready to fire.
- If a cartridge does not fire and the trigger has been pulled and the safety is disengaged... Stop! And do the following: a) Make sure the gun is pointed in a safe direction b) Engage the safety c) Wait 60 seconds d) Follow the instruction below for unloading the shotgun.
- Semi auto shotguns automatically feed the next live round from the magazine into the chamber each time the gun fires. No user intervention is required for the shotgun to complete the re-chambering operation, thus you must be aware that the shotgun will be ready to fire another round after the previous round has been ejected and the new round has been chambered.
- During firing, the bolt cocking handle travels reward with considerable force and velocity. Do not allow any objects to enter its path.
- If during firing the sound of any cartridge is noticeably softer or louder than the previous cartridge fired, **Stop!** Do not load another cartridge or fire another cartridge and do the following: a) Make sure the gun is pointed in a safe direction b) Engage the safety c) Follow the instruction below for unloading the shotgun d) With the shotgun unloaded visually inspect the shotgun for barrel blockage or damage and inspect the mechanical portion and receiver of the shotgun for damage before continuing.
- **PLEASE READ AND UNDERSTAND ALL WARNINGS IN THIS MANUAL BEFORE USING THE SHOTGUN, MAKE SURE YOU KNOW WHAT YOU ARE SHOOTING AT**

1. Make sure the gun is pointed in a safe direction and that you are **wearing ear and eye protection.**
2. Engage safety if not already engaged.



3. To begin firing disengage the safety by rotating it downward towards the trigger, pointing toward "F" make sure you are ready to fire and the shotgun is pointed in a safe direction before you move the safety.



4. Pull the bolt back to the rear via the bolt handle and then release the handle. The bolt will strip a round from the magazine and insert it into the chamber. If the bolt doesn't fully close don't force it closed. Follow unloading instructions if bolt doesn't fully close.
5. When you are ready to fire pull the trigger to the rear and then release it. You may then pull the trigger again if you wish to fire another round.
6. If the shotgun stops firing due to failure or full use of ammunition follow unloading instructions below.

## To Unload Shotgun

1. Make sure that gun is pointed in safe direction and engage safety, if not already engaged. Never allow your finger or any object to come in contact with the trigger during the unloading operation...
2. Remove the magazine by pushing the magazine release lever forward until it touches the body of the magazine, while keeping the release lever in the forward position swing the magazine forward and out of the receiver.



3. With the magazine removed move the bolt block safety to its lower position, slide the bolt to the rearward position via the cocking handle and inspect the chamber to be certain the shotgun is empty and free of debris and then re-engage the bolt block safety so that it is holding the bolt in the rearward position. If there was a spent or unspent cartridge in the chamber it should have been ejected. If there is a cartridge stuck in the chamber and it did not come out when you moved the bolt to the rear, obtain a cleaning rod and push the cartridge out backward.

### MANUFACTURER'S WARNING

This shotgun was manufactured to properly perform with the original parts as designed. It is your duty to make sure any parts you buy are correctly installed and that neither replacements nor originals are altered or changed. Your gun is a complex tool with many parts that must relate correctly to other parts for safe and accurate operation. Putting a gun together wrong or with modified parts can result in a damaged gun, injury or death to you or others through malfunction. Always let a qualified gunsmith work on your gun or at least, check any work not performed by a gunsmith. Shotguns safety is your primary concern.

**THE GUN OWNER MUST ACCEPT FULL RESPONSIBILITY FOR THE CORRECT REASSEMBLY AND FUNCTIONING OF THE SHOTGUN AFTER ANY DISASSEMBLY OR REPLACEMENT OF PARTS.**

**Note: The trigger cartridge component is not user serviceable, please refer any trigger component work to a qualified gunsmith!**

### **Direction for Disassembly for Cleaning and Maintenance and Reassembly**

Make sure the gun is unloaded and pointed in a safe direction. Make sure the safety is on. There is no excuse for not being careful.

**Step 1:** With the bolt in the forward position and the safety engaged



**Step 2:** Depress the Upper Receiver Release Latch button and then depress the latch



**Step 3:** Grasp the dust shroud and pull it away from the receiver body, now the internal mechanism of the shotgun is exposed



**Step 4:** Push the Upper Receiver Latch forward with your thumb and index finger controlling the latch. Push the latch far enough forward so that it is free of the latch rails and lift up and remove the latch assembly from the receiver... **Be careful because the latch is under spring tension.**



**Step 5:** Disengage the safety and then pull bolt assembly to the rear and remove from receiver.



**Step 6:** Separate the bolt from the bolt carrier, to do this move the bolt backward, give it half a turn counterclockwise and take it out by using a forward motion. To reassemble start with reinstalling bolt assembly and work your way backward through the steps of assembly.



**6a.**

**In order to remove the safety, the disconnecter must be pushed forward during removal, during reinstallation the disconnecter will not need to be depressed**

**Step 7:** Access the gas puck. Remove the gas adjuster. To do this push the spring-loaded plunger flush with a drift pin and undo the gas adjuster by rotating it counterclockwise and withdraw the gas puck.



### **Gas regulator adjustment**

**When looking and/or adjusting the gas regulator always be sure to follow safe firearm handling by ensuring that the shotgun is unloaded and the breech is clear using the bolt hold open and a safety round or other chamber blocking device!**

There are 4 settings for the gas regulator, These 4 settings are identified by the four different size indents on the front of the regulator. These indents should line up with the locking detent located at the 7 O'clock position on the gas block. The four positions are as follows: smallest dot = basically no gas, no rounds will usually cycle when the regulator is on this position. Next smallest dot = "00" buckshot, high velocity rounds and slugs. Next to largest dot = all things in between your results and field testing will be required to see what your individual shotgun will run in this setting. Largest dot = birdshot and other lower powered ammunition.

To change the regulator setting depress the detent using a pick, small screwdriver or similar and rotate the regulator clockwise, if possible, to the desired setting. Always try and keep the regulator screwed in as close as possible to the gas block to maintain as small a gas chamber area as practical.

It should be noted that some ammunition will not cycle a semi automatic magazine fed shotgun. There are some #8 & #7&1/2 that simply will not cycle these shotguns. Winchester Universal & most rounds that are labeled "Target Loads" and similar cheap bulk pack ammunition will not work frequently. There are also some "roll crimp" "00" rounds that will give you failure to feeds and failure to eject as well. If a setting doesn't work for you try some different ammunition before assuming the shotgun is at fault.

## **CLEANING AND MAINTENANCE OF THE SHOTGUN**

- A) Follow procedures for unloading the shotgun as described previously
- B) Follow procedures for disassembly of the shotgun as described previously.  
Materials needed to clean this shotgun are: a cleaning rod, cotton bore patches, brass bore brush, powder solvent, a small soft brush and good quality gun oil.

**WARNING:** Lead or lead compounds are known to the State of California to cause cancer, birth defects, reproductive toxicity, and other serious physical injury. Those who clean shotguns should take protective measures to avoid contact or exposure to such chemicals.

2. Using the bore brush with powder solvent scrub the barrel and chamber to remove any powder and lead residue in the bore. Always and lastly, swab with cotton patch with gun oil to coat and protect the bore and chambers from rust and corrosion.

3. Any powder fowling on the firing wall, barrel, etc. can be easily cleaned with a brush and powder solvent.
5. All external surfaces should be wiped down with light coat of rust preventative. Avoid using too much oil as dust and/or debris can get trapped in the oil creating a gum that in time will cause misfires.
6. CAUTION in using solvents in gun bore cleaning. Prolonged or excess contact with finish or bluing can damage the gun's finish. Be sure to wipe away all excess solvent and then lubricate with oil.
7. This shotgun should be cleaned after firing. In addition, external parts should be wiped with an oiled cloth after handling. A light oil is ordinarily all that is necessary in cleaning if the gun has not been fired or fired very little. If a gun is used frequently, it must be cleaned after each firing and regularly serviced by a professional gunsmith. If the gun has been stored, remove all excess oil and/or grease before firing. Always check to be sure that no cleaning patch or other obstruction remains in the bore or chambers before firing.

### **DANGER -- AMMUNITION WARNING**

Shotguns may be damaged and serious injury or death to the shooter or bystander may result from any condition which contributes to the generation of excessive pressure or uncontrolled release of gas within the shotgun. Such adverse conditions can be caused by bore or chamber obstruction, propellant powder overloads or by defective, incorrect or improperly loaded and assembled cartridge components. Even the strongest shotgun can be blown up as a result of excessive pressure. It is extremely dangerous to use a cartridge whose pressure is greater than that developed by cartridges loaded to industry standards.

### **AMMUNITION NOTICE**

We specifically disclaim responsibility for any damage, injury or death occurring in connection with or as the result of the use of LH12 shotguns with faulty, nonstandard, remanufactured, hand loaded or reloaded ammunition, used cartridges or cartridges other than factory cartridges for which the shotgun was originally chambered.

### **LUBRICATION WARNING**

Firing a shotgun with oil, grease or any other material even partially obstructing the bore may result in damage to the shotgun and injury to the shooter and those nearby. Do not spray or apply lubricants directly on ammunition. If the powder charge of a cartridge is affected by the lubricant, it may not be ignited, but the energy from the primer may be sufficient to push the projectile(s) into the bore where it may become lodged. Firing a subsequent cartridge into the obstructed bore will damage the shotgun and may cause injury to the shooter

and those nearby. Use lubricants properly. You are responsible for the proper care and maintenance of your shotgun and ammunition.



### **ONE YEAR LIMITED WARRANTY**

This LH12 shotgun is warranted to the original retail customer for One Year from date of purchase against defects in material and workmanship. All parts and labor or replacement **at our option** are covered. The warranty on the stock, pistol grip and forend is 60 days from purchase and only covers manufactured and material defects.

Transportation to and from our repair facilities, government fees, damage caused by failure to perform normal maintenance, sales outside the United States, damage due to use of high velocity, high pressure, reloaded or other nonstandard ammunition, or any unauthorized repair, modification, misuse, abuse, or alteration of the product is not covered by this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to one year from date of original retail purchase. Consequential or incidental damages and/or expenses, or any other expenses are not covered by this warranty.

To obtain warranty performance Contact SDS Imports LLC at;

info@sdsimports.com or 865-604-6894

### **WARNING**

Altering or modifying parts and/or safeties is dangerous and will void the warranty. This shotgun was manufactured to perform properly with the original parts as designed. It is your duty to make sure any parts you buy are made for this shotgun and are installed correctly and that neither the replacements nor originals are altered or changed. Your gun is a complex precision tool with many parts that must relate correctly to other parts in order for proper and safe operation. Putting a gun together wrong or with incorrect or modified parts can result in a damaged gun, danger, and injury or death to you and others through malfunction. Always have a qualified gunsmith work on your gun or at least check any work not performed by a gunsmith.

## **YOUR OWNERS' MANUAL**

Always keep this manual with your shotgun. Make sure you understand all the warnings, operation instructions and safety procedures. When you lend, give or sell the shotgun, be sure this manual goes with it. You can get a copy of this manual from SDS Imports on request.

Importer:

SDS Imports LLC  
PO Box 9144  
Knoxville, TN 37940  
[info@sdsimports.com](mailto:info@sdsimports.com)

Manufacturer:

Hubei Jianghua Machinery Co., LTD China



### **! WARNING**

Children are attracted to and can operate shotguns that can cause severe injuries or death.

Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded shotgun where a child obtains and improperly uses it, you may be fined or sent to prison.



### **! ADVERTENCIA**

A los niños les atraen las armas de fuego y los pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte.

Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente, le pueden dar una multa o enviarlo a la **carcel**[SD1].